
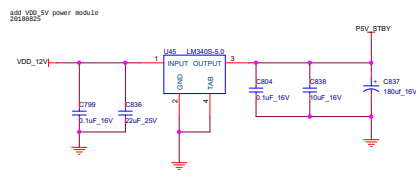


```
O-USR: OSR=USR OFF
VBOOT: SET VBOOT=0.95V@VR12.5(VID=2E) refer to table1/table82-table84
F-IMAX: set IMAX=50A, frequency 50khz
OCL-R: set ocp 45A per phase, ramp 150mvpv
      (k=2 in equation 5, Ipp=10A refer to equation 9)
ISUM: LOAD LINE=0, VDROOP=0
IMON: VIMON=0.85V, IMAX=50A
```

iovp的设置要保证每一相的输出电流不能超过其额定电流值
一般设置ocp为输出所需电流的1.5~3倍,如果纹波较大,还需要增加30%的余量

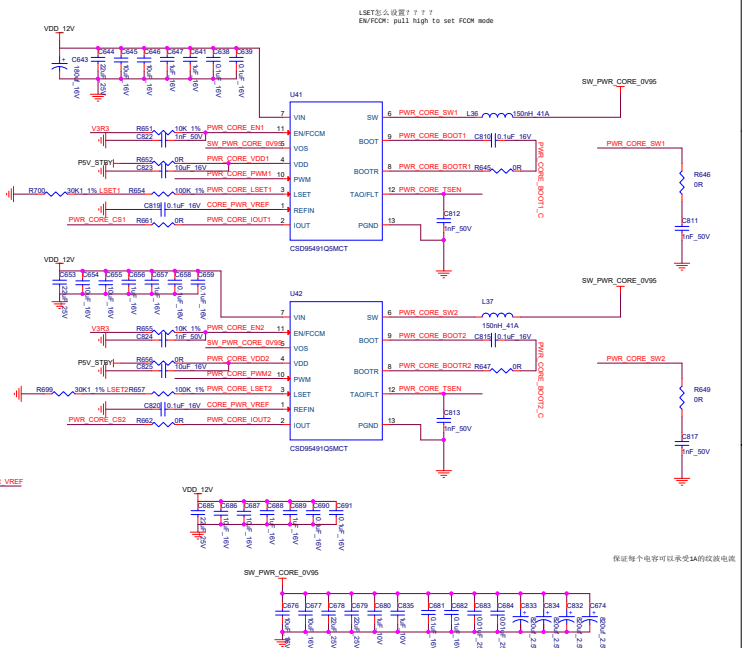

Title			
Storm Switch Board			
Size	Document Number	Rev	
Customer	Power-Switch Core 0V95	Rev	
Date	Monday, August 27, 2018	Sheet	23 of 28