



Note: "DNP" mean the component is not populated by default.


Title: Hercules launchpad_RM42_RevB	
Version: A	
2013/6/3 11:07:58	
Drawn By: Embest	1/6



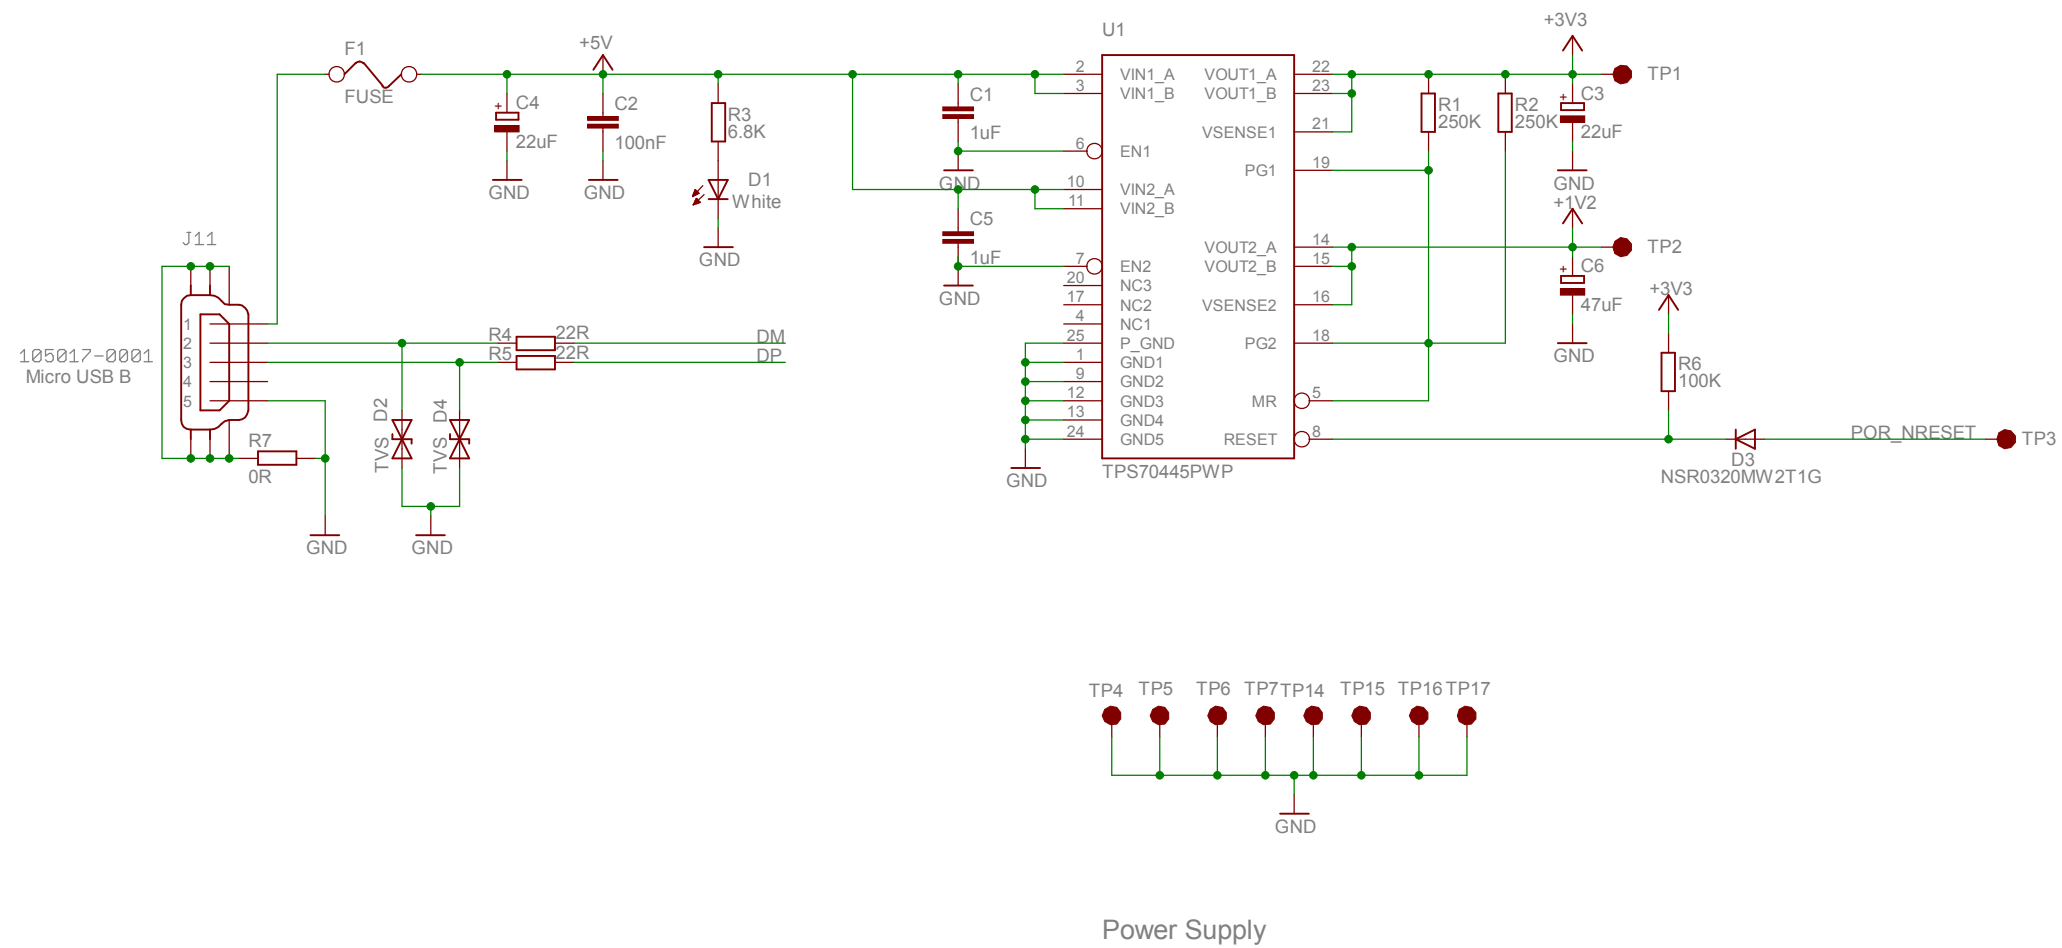


Title: Hercules launchpad_RM42_RevB	
Version: B	
2013/6/3 11:07:58	
Drawn By: Embest	2/6

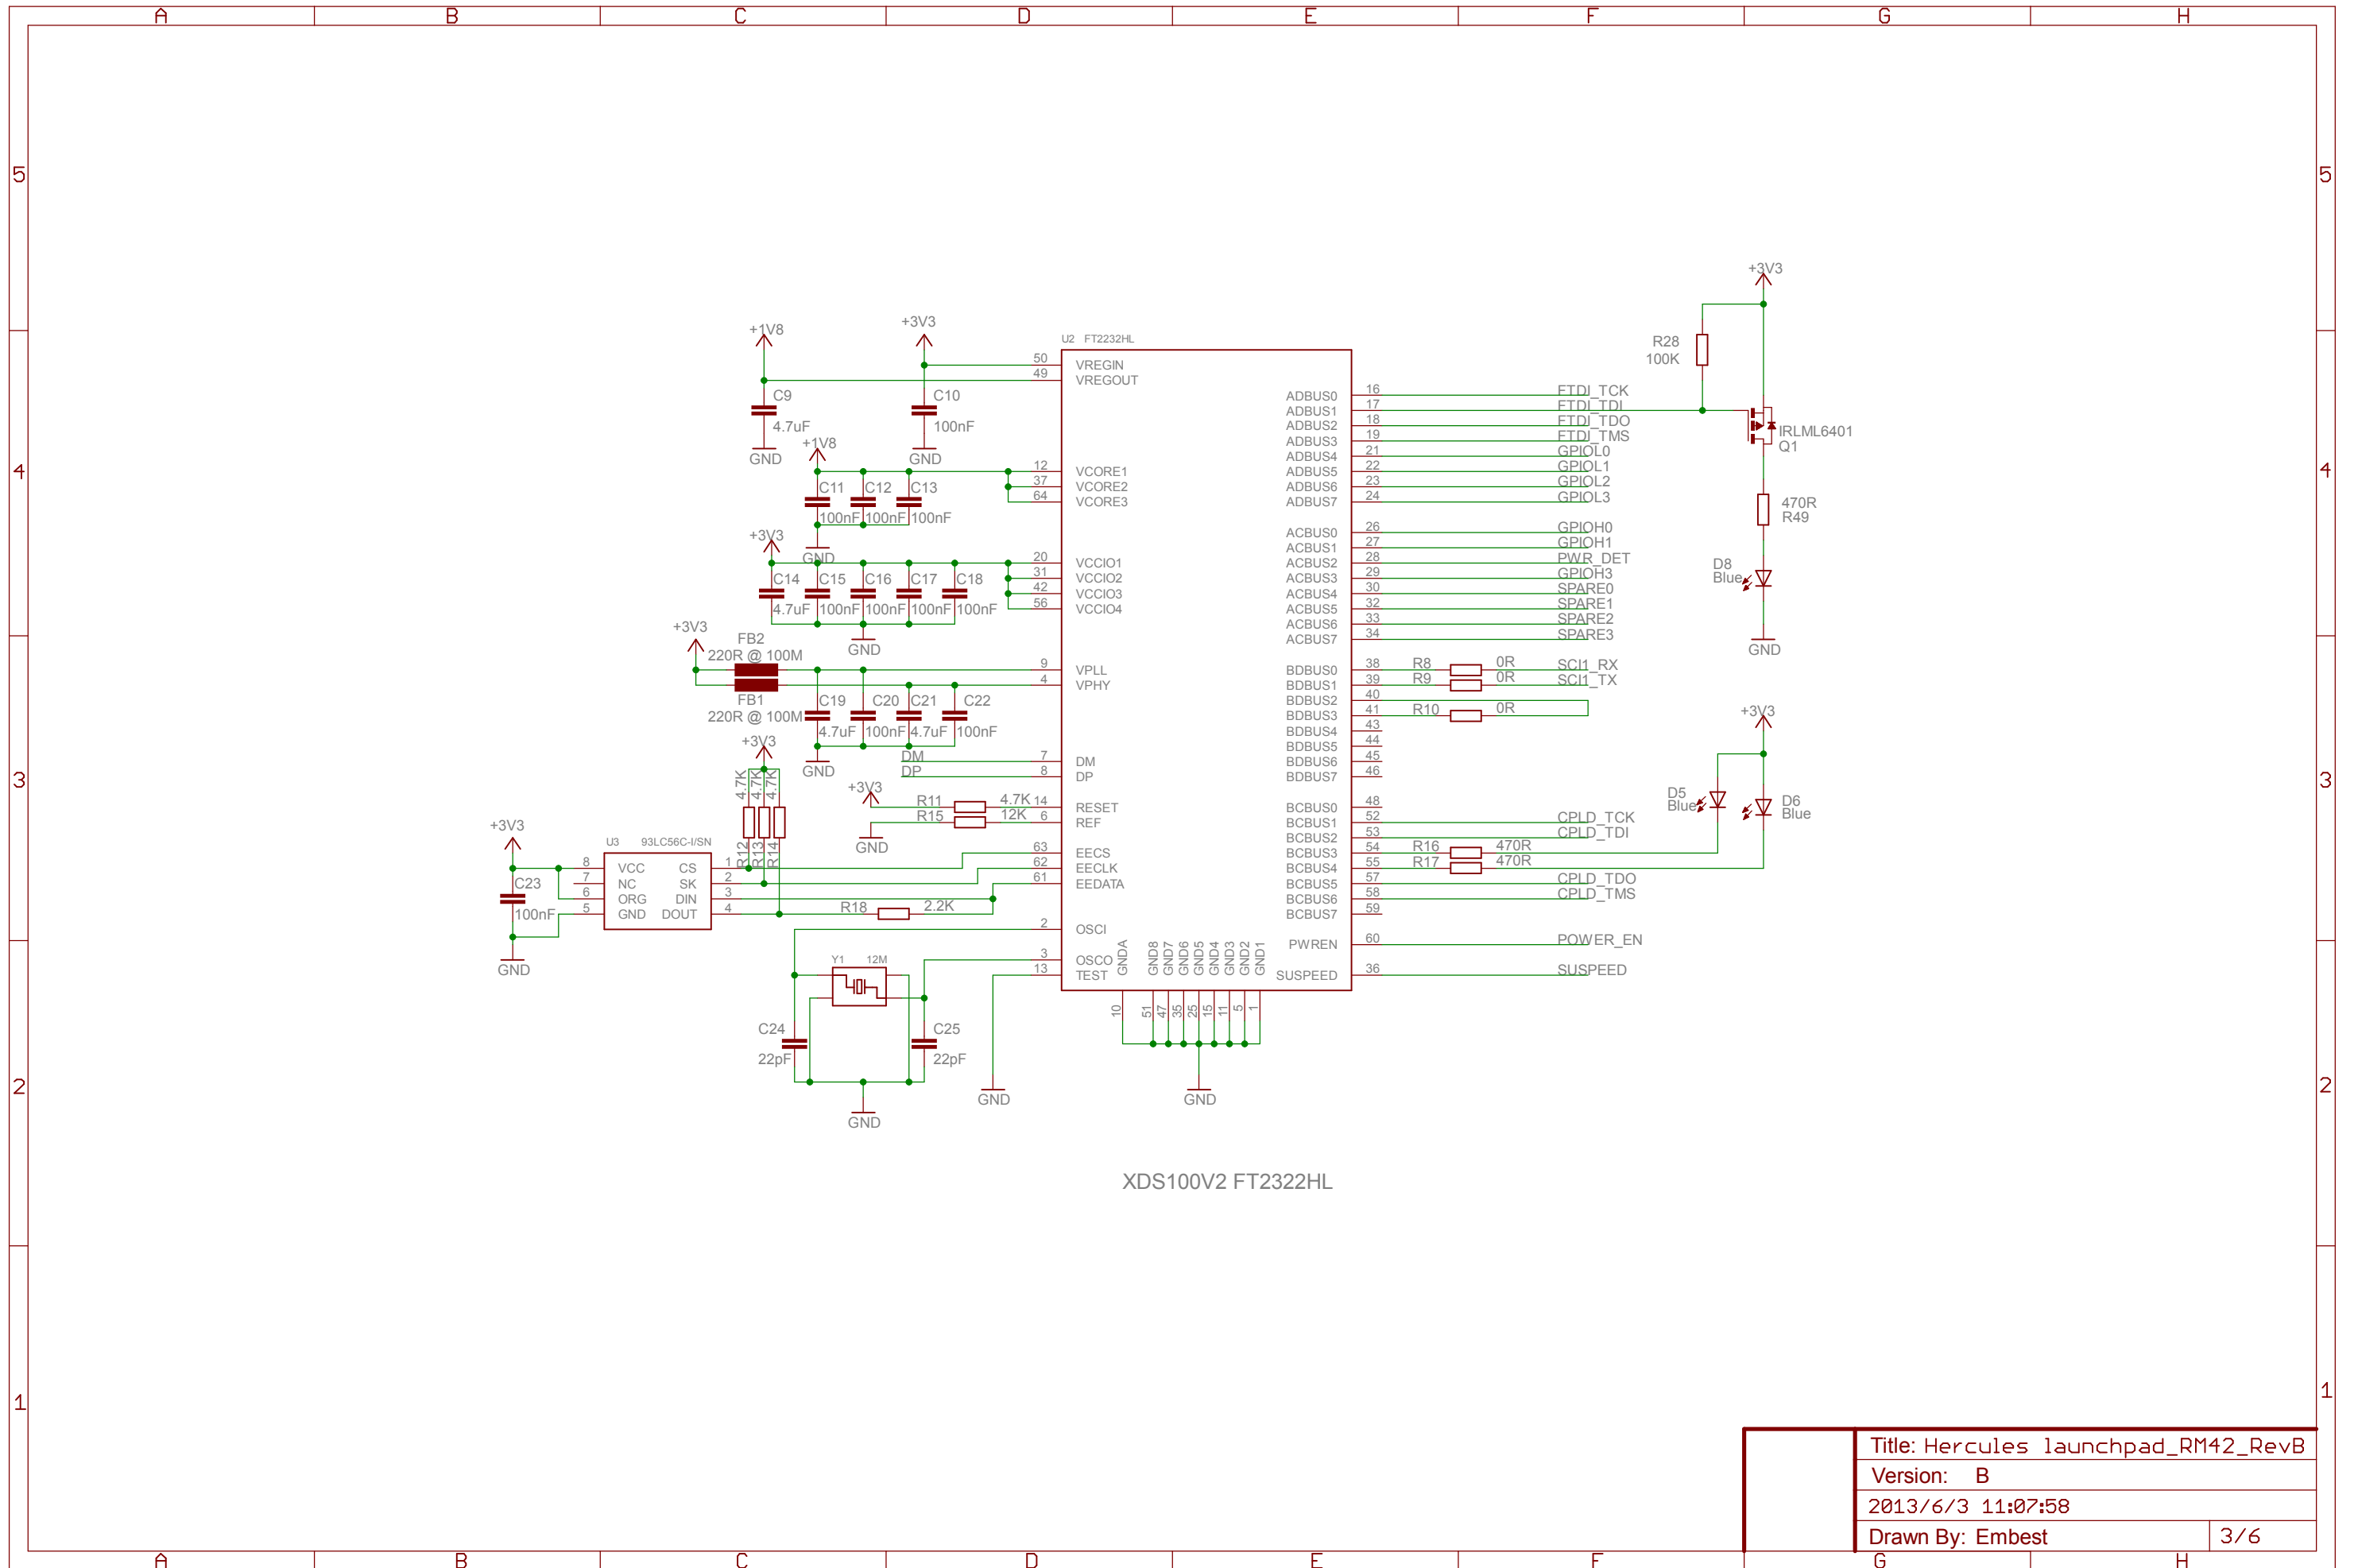

Title: Hercules launchpad_RM42_RevB	
Version: B	
2013/6/3 11:07:58	
Drawn By: Embest	3/6

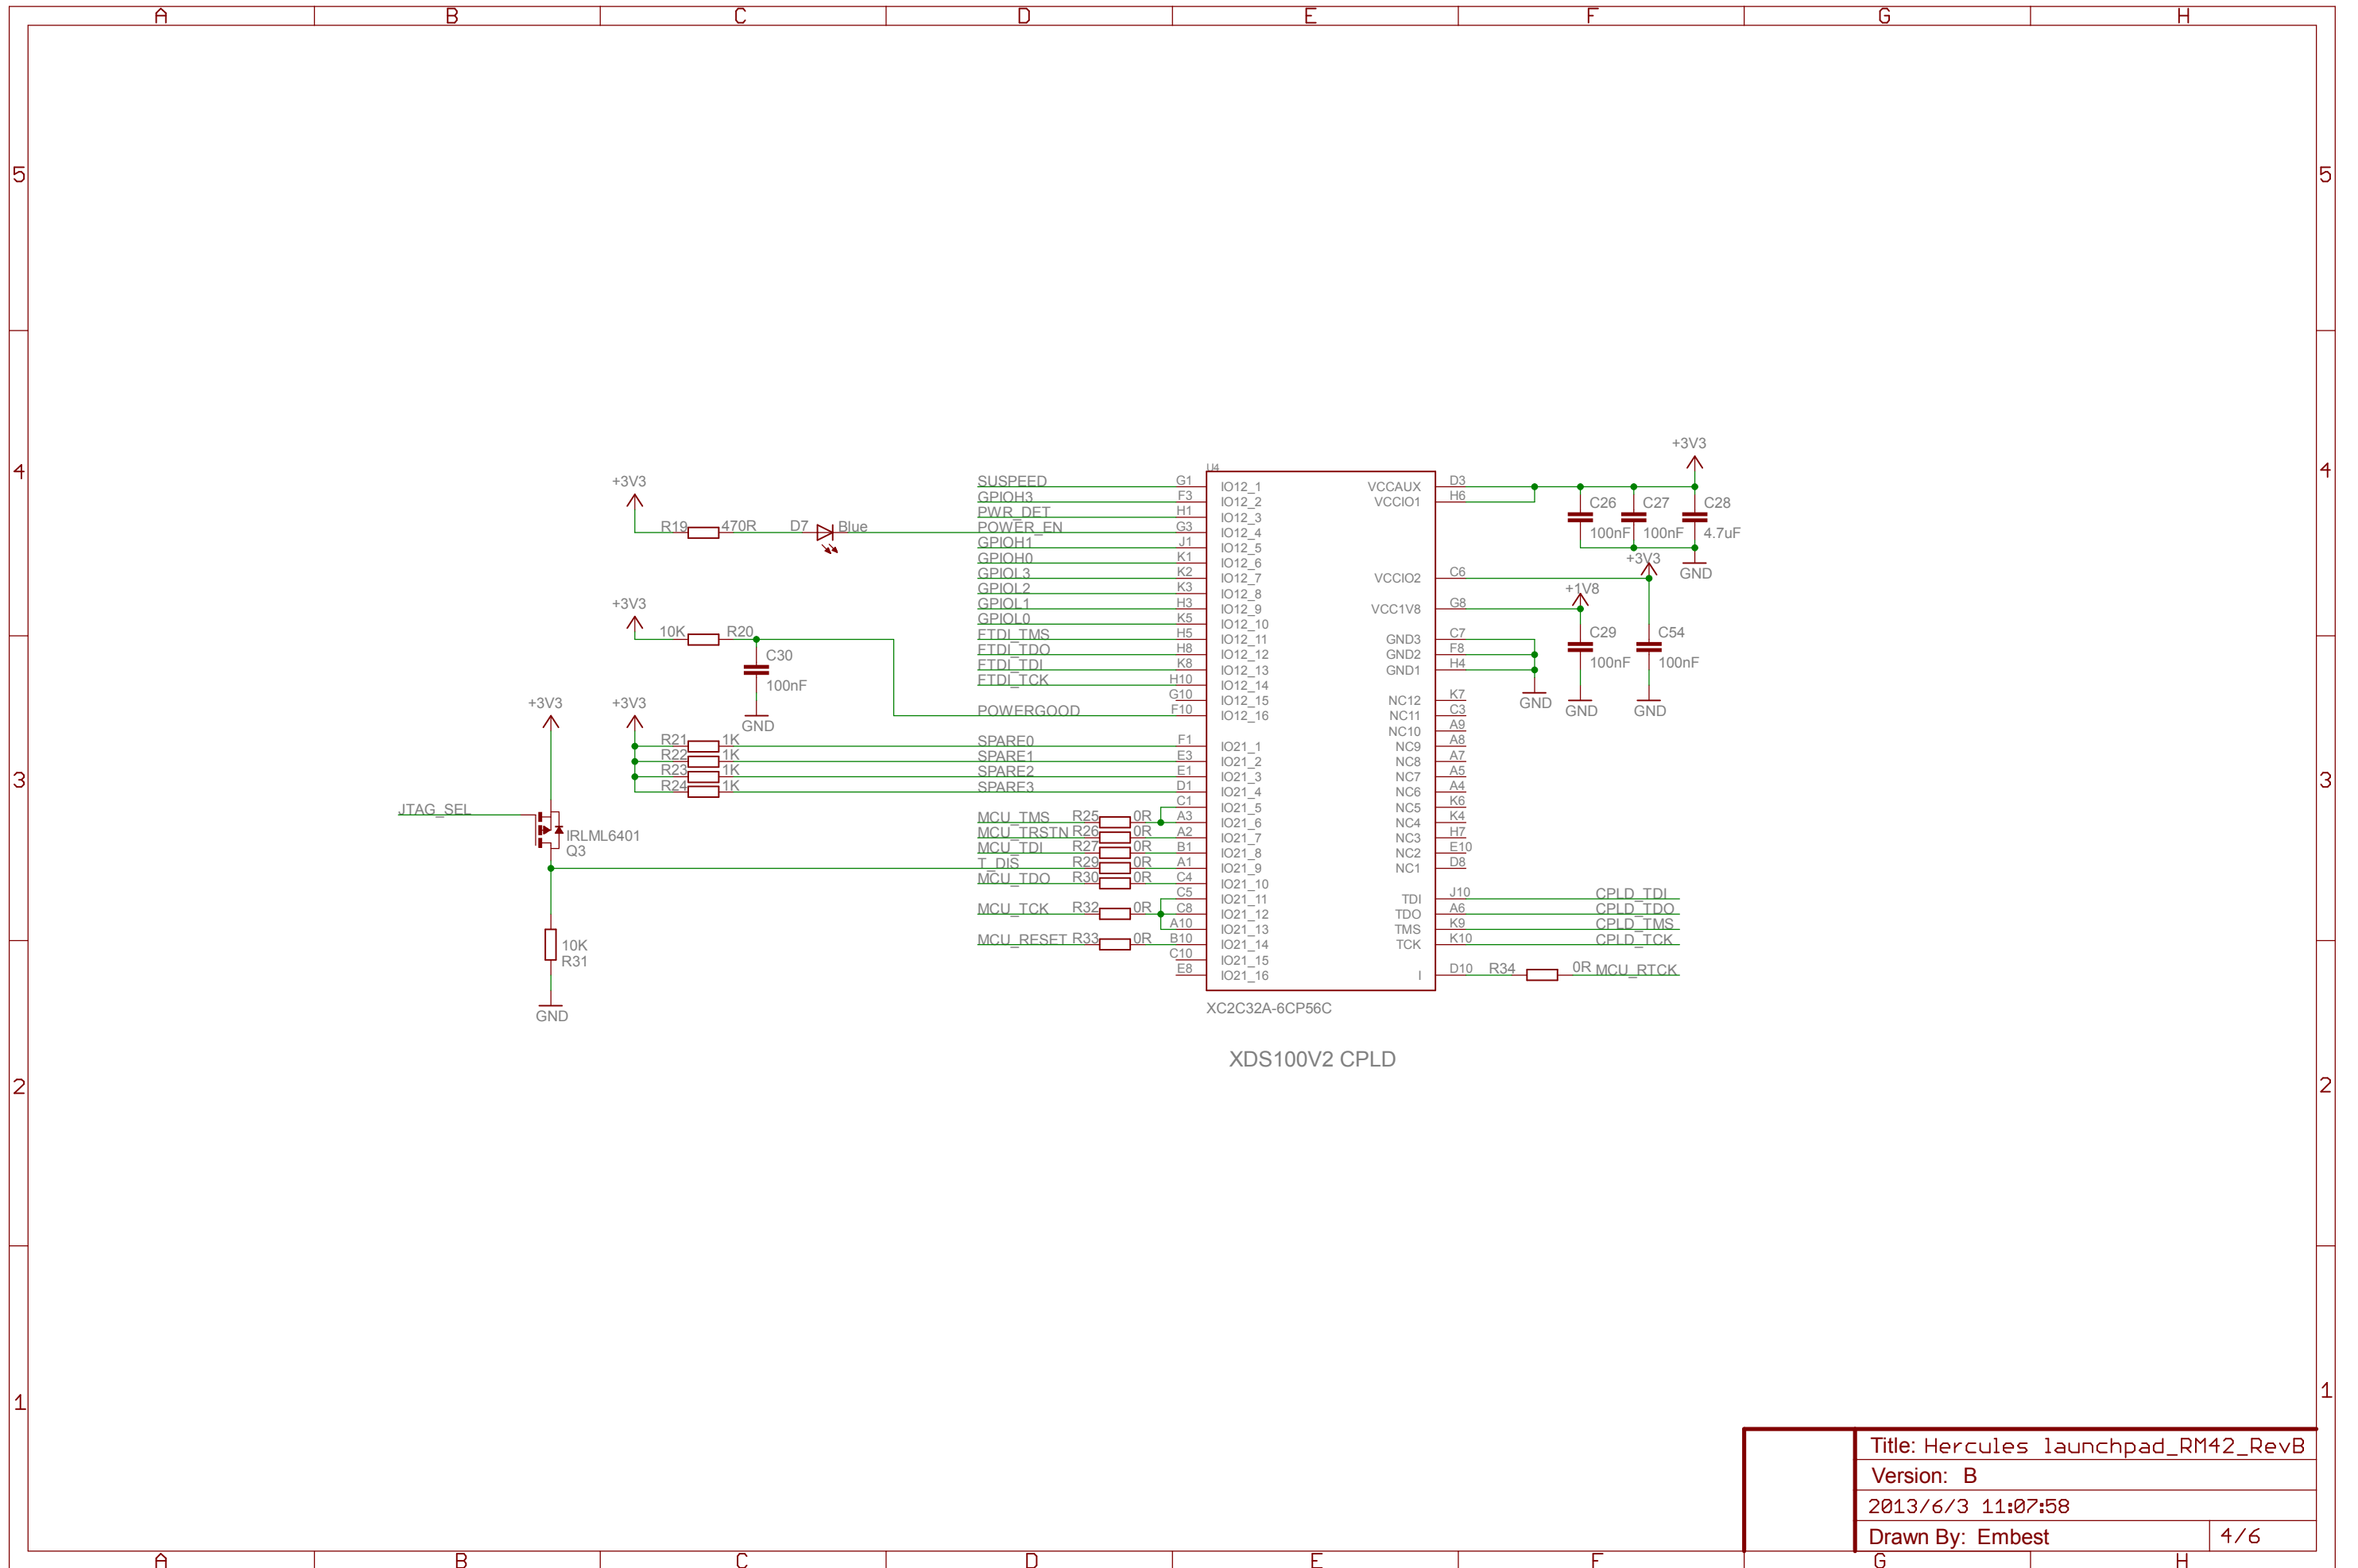

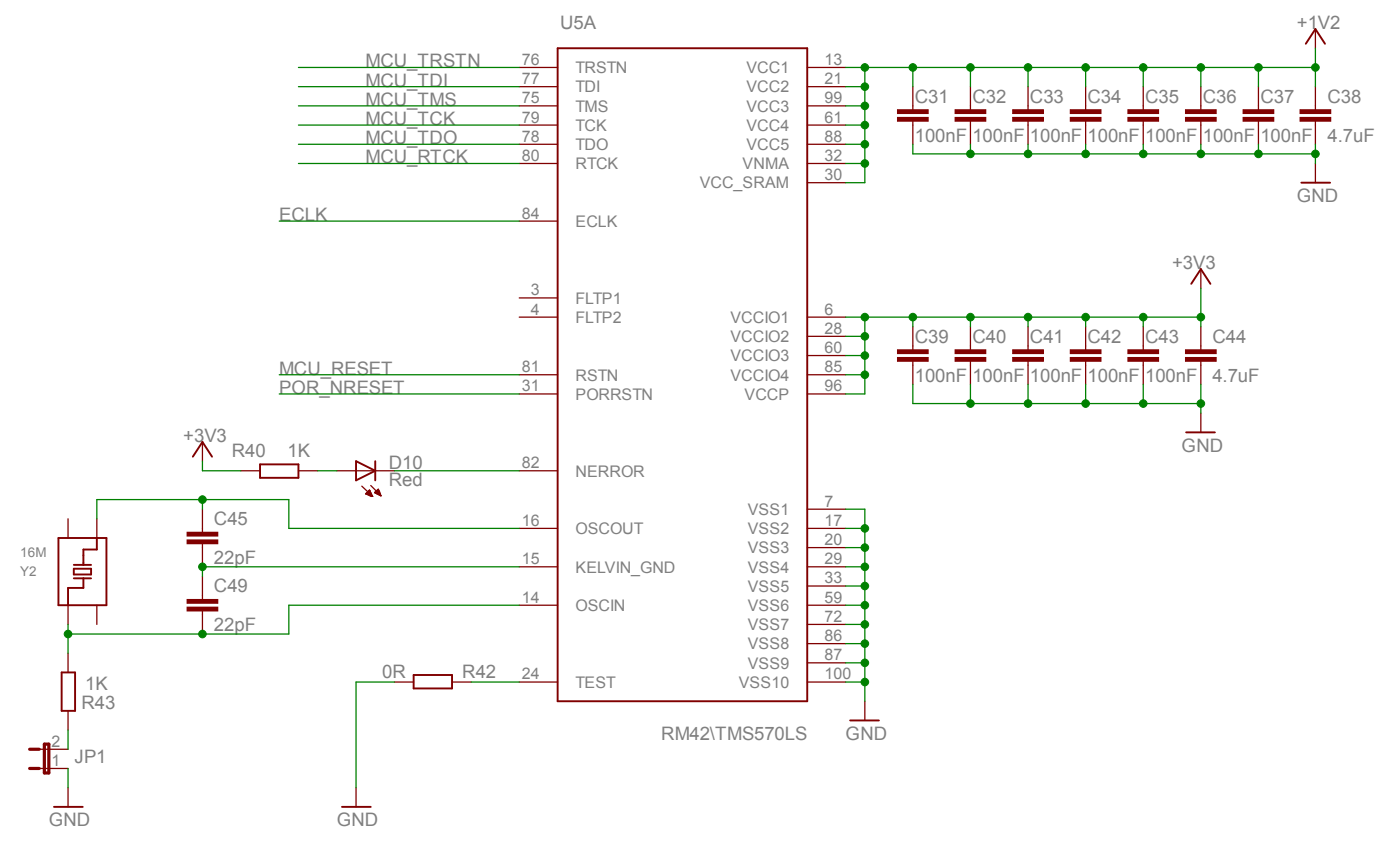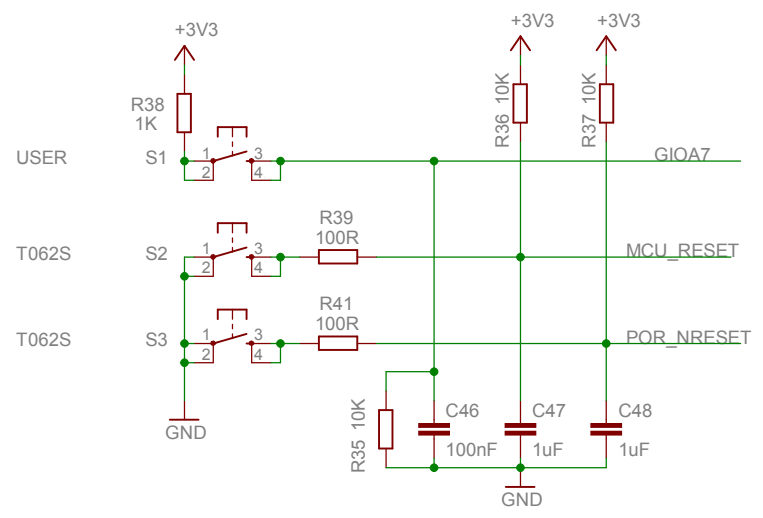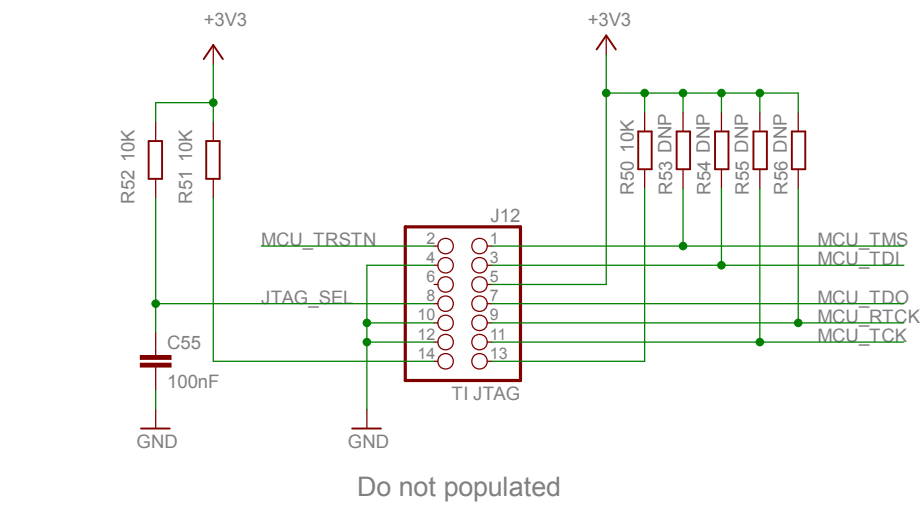

Title: Hercules launchpad_RM42_RevB	
Version: B	
2013/6/3 11:07:58	
Drawn By: Embest	5/6

