



TPS54620-----5V TO 1.5V (6A)

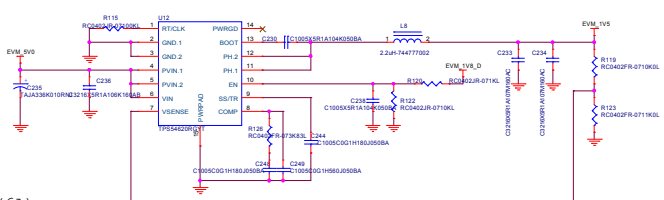

TPS51200-----3.3V TO DDR_VTT\REF_OUT (6A)

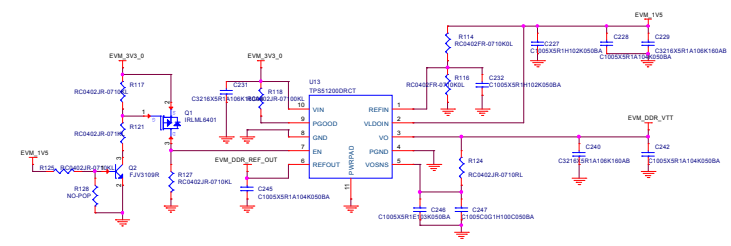

上电说明:

- (1) EVM_1P8_D\EVM_1P8_A1\EVM_1P8_A2先上电;
- (2) EVM_1V5\EVM_DDR_VTT\EVM_DDR_REF_OUT上电;
- (3) EVM_3V3和EVM_1V1上电;
- (4) EVM_1V2上电。

TPS40041-----5V TO 1.2 (6A)

