
 
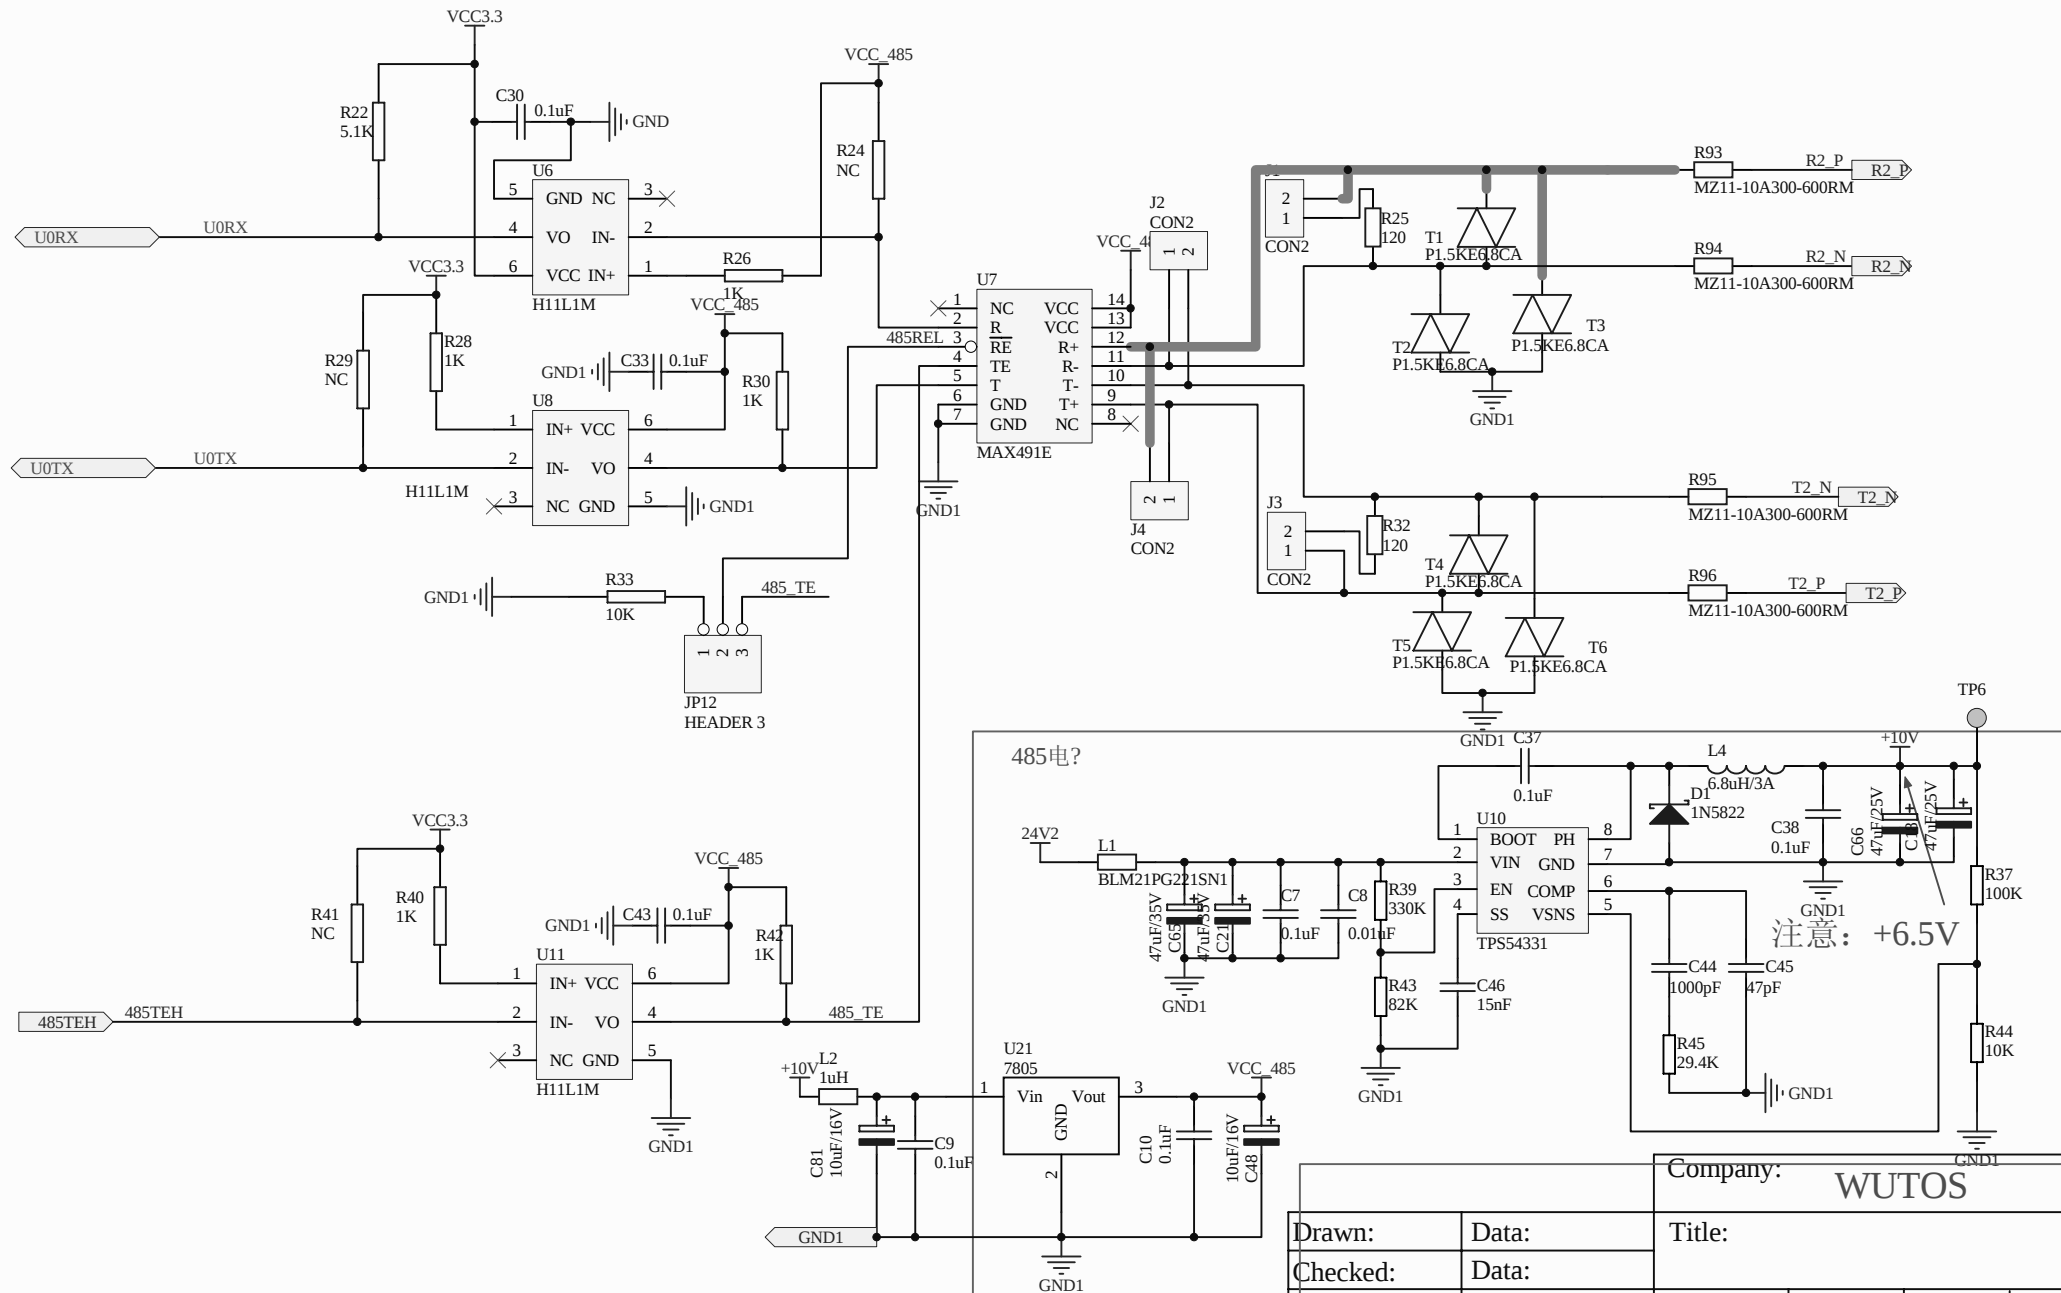

 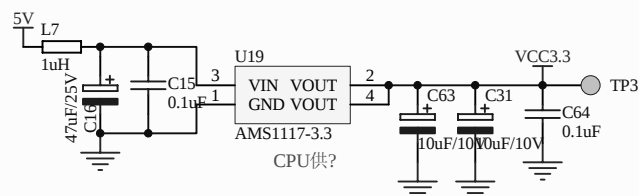
 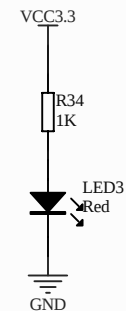
 

 
 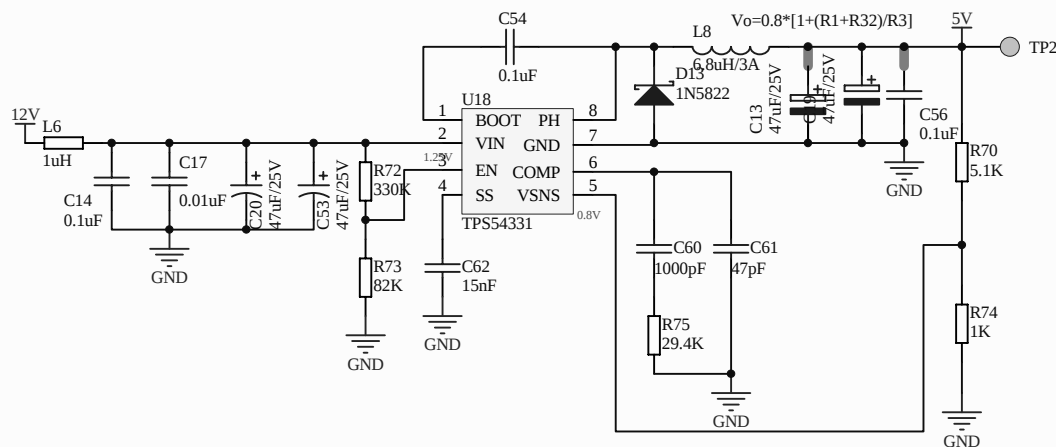
 




1	2	3	4
A	180CII ----Signal Board		
B	修改记录:\		
C	Page -- Desicription	1..将CORE模块整体位置调整	
	1 -- MENU	2..增加CORE屏蔽框	
	2 -- MCU_GPIO	3..电源接插键封装更换	
	3 -- MCU_POWER	4..调整部分走线方向	
	4 -- RS485	5..删除74HC14	
D	5 -- RELAY		
	6 -- CONNECTOR AND POWER		
	7 -- DA-current		
		Company: WUTOS	
		Drawn:	Title:
		Checked:	Data:
		Q.C.:	Data:
		Released:	Data:
		Code:	Size:A4
		Scale:	Ver.:
		Drawing No.:	Sheet: 1 of: 7
1	2	3	4

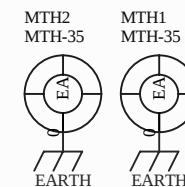


Company: WUTOS		Title:			
Drawn:	Data:	Code:			
Checked:	Data:	Size: A4			
Q.C.:	Data:	Scale:			
Released:	Data:	Ver.:			
Drawing No.:		Sheet: 4 of 6			

DC TO DC MODULE

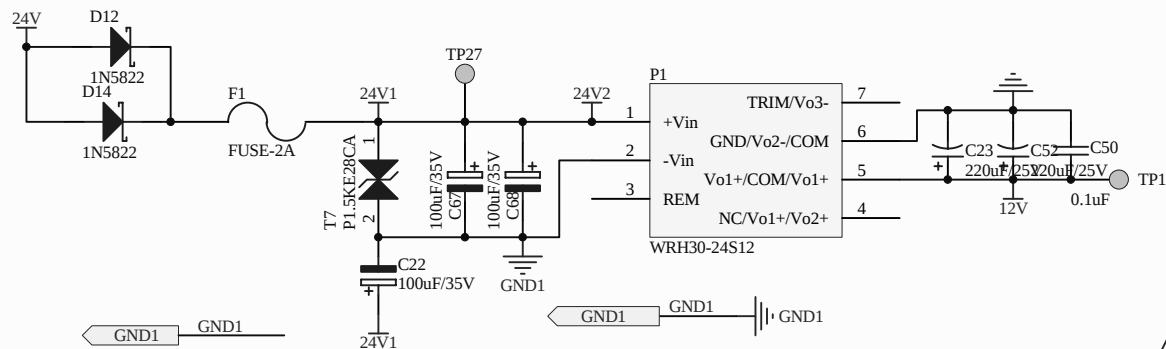

Company: WUTOS

Drawn:	Data:	Title:			
Checked:	Data:				
Q.C.:	Data:	Code:	Size:A4	Scale:	Ver.:
Released:	Data:	Drawing No.:		Sheet:	6 of:

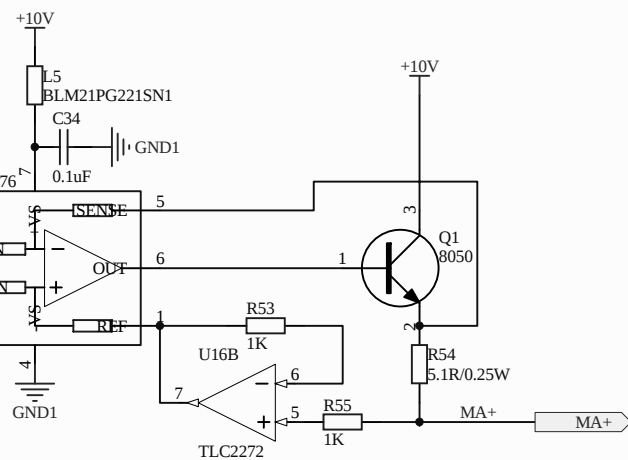

Drawn:	Data:	Title:			
Checked:	Data:				
Q.C.:	Data:	Code:	Size:A4	Scale:	Ver.:
Released:	Data:	Drawing No.:		Sheet:	of:

Company: WUTOS

Title:	
--------	--

Checked:	Data:
----------	-------

Q.C.:	Data:	Code:	Size:A4	Scale:	Ver.:
-------	-------	-------	---------	--------	-------

Released:	Data:	Drawing No.:	Sheet: of:
-----------	-------	--------------	------------

A

B

C


 



D

A

B


C

D

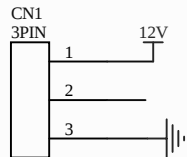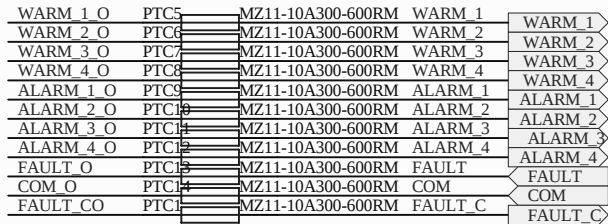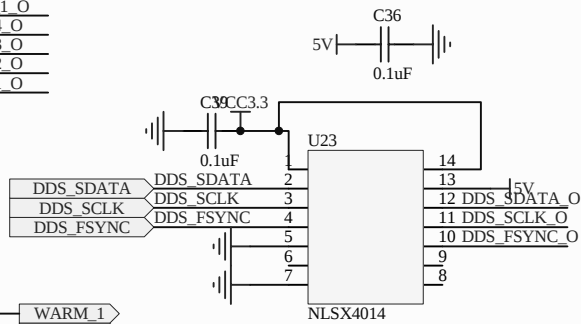
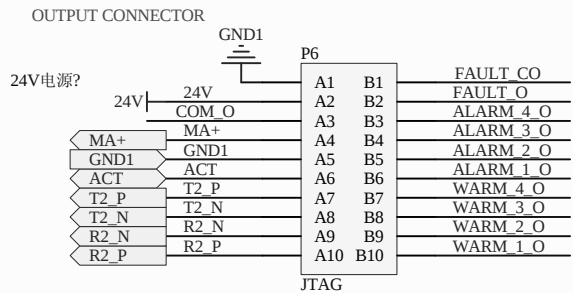





指示灯显示板原理图需修改

TO LCD BOARD

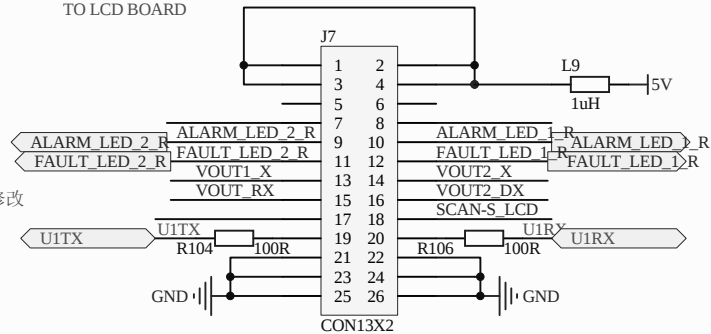


指示灯显示板原理图需修改

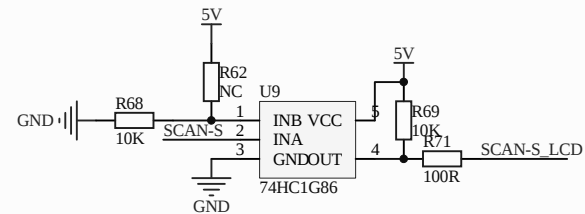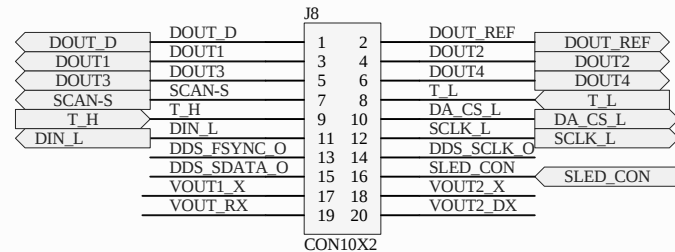

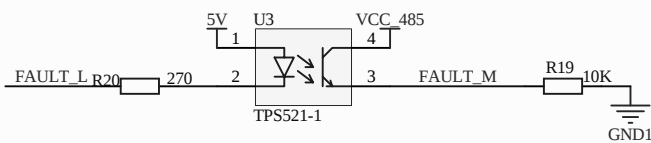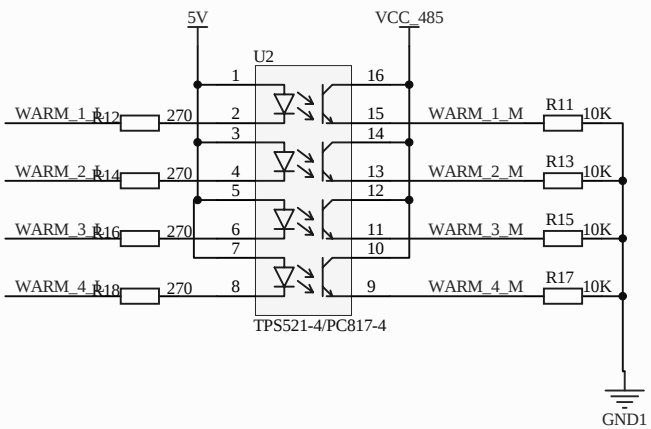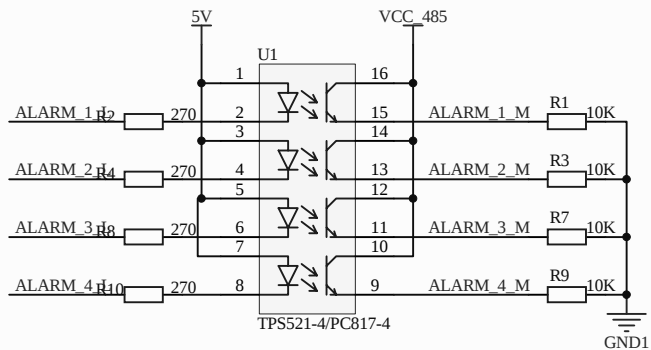

GND1 GND1

FAULT_M	FAULT_M
WARM_4_M	WARM_4_M
WARM_3_M	WARM_3_M
WARM_2_M	WARM_2_M
WARM_1_M	WARM_1_M
ALARM_4_M	ALARM_4_M
ALARM_3_M	ALARM_3_M
ALARM_2_M	ALARM_2_M
ALARM_1_M	ALARM_1_M

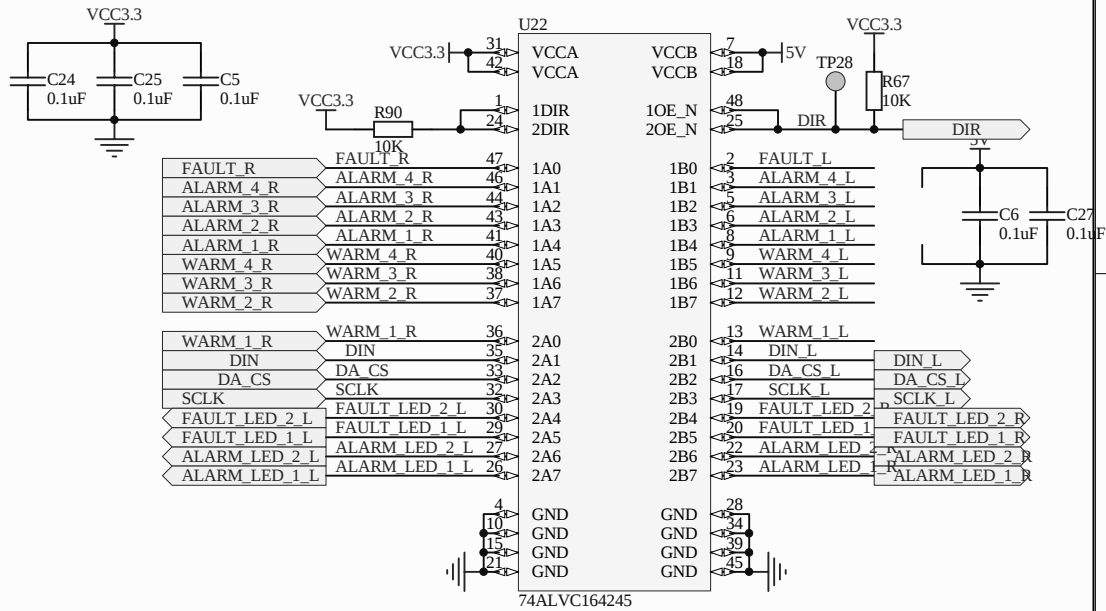

Company:		WUTOS			
Drawn:	Data:	Title:			
Checked:	Data:				
Q.C.:	Data:	Code:	Size:A4	Scale:	Ver.:
Released:	Data:	Drawing No.:		Sheet:	of: